


- A.) 5" HOLES CUT INTO BLOCKS PRIOR TO POUR
- B.) PLACE BOLTS INTO LEDGER STRIP
- C.) SUPPORT LEDGER STRIP USING 2X4's AND USE LEDGER STRIP TO STOP CONCRETE BY FASTENING TO FOAM WITH WIRE OR SNAP TIES.
- D.) WODDEN LEDGER STRIP SHOWN BEARING DIRECTLY ONTO CONCRETE. USE ANCHOR BOLTS ACORDING TO ENGINEER SPECS.
- E.) JOISTS OR TRUSSES BEARING ON LEDGER.

INSTALLATION OF JOISTS USING ANCHOR BOLTS

D1

1" = 1'-0"

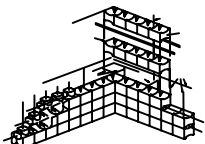

ReddiForm, Inc.

DUE TO VARIANCES IN LOCAL CODES, ALL DETAILS SHALL BE CONSTRUCTED IN ACCORDANCE WITH LOCAL CODES REGARDLESS OF DETAIL CONSTRUCTION SHOWN IN DRAWING. REDDI-FORM RESERVES THE RIGHT TO CHANGE INFORMATION SHOWN WITHOUT NOTICE.

DRAWN BY:	CHECKED BY:
SCALE: 1"=1'-0"	
DATE: 6/25/96	
JOB NUMBER	SHEET
REDDI-FORM	D1